

UI-View Settings for Internet-only

Revision #2, 4 October 2011

Notes

- Read the help file for each setup menu fully.
- These notes assume VE3ABC as your callsign and Atikokan as your QTH.
- Most settings, other than COMMS, will work as noted here if and when you attach a radio.
- Any settings for any screens that I don't mention are irrelevant.

Comms

- COM Port – none
- Host mode – none
- Receie only – ON

Station Setup

- Callsign – VE3ABC-10
 - Change to VE3AB C-1 if you add a radio.
- Latitude – 48.45.67N
 - This is to show format only, use Google Earth to find your actual location.
 - UI-View uses decimal seconds.
- Longitude – 091.35.86W
 - This is to show format only, use Google Earth to find your actual location.
 - UI-View uses decimal seconds.
- Unproto port - 1
- Unproto address – APRS, VE3RIB, WIDE2-1
 - This will force VE3RIB to digi, and will repeat one additional hop.
- Beacon comment – VE3ABC in Atikokan, Internet-only.
 - This can be anything you want, really.
- UI-View Tag – ON
- Beacon interval, fixed – 30
- Beacon interval, mobile – 0, 0
- Beacon interval, Internet – 30
- Symbol – Home
- Compressed beacon – off

Status Text

- This can be anything you want.
- If you are using WinLink mail, start with "WLNK-1"

Station Info

- This can be any info you want on your station, but few stations can really access this info.

WX Station Setup

- Leave as is.

Digipeater Setup

Note: We do not want too many digis in the area; it only clutters the RF without adding any real distance to a person's beacon. If you have a station in a location that might provide a fill-in for our digis, let me (VE3FYN) know and we'll see about setting it up.

- Enable digi – off

GPS Setup

- Com Port – none

APRS Compatibility

- Unproto Address - APRS
- Enable UI-View(32) extensions – OFF

Miscellaneous

Note: Some of these may be changed to suit personal preference, but these are good starts.

- Refresh Preference – 5 mins
- Station List auto sort – sort by callsign
- Beacon pause (secs) – 2
- Random grid square plot – OFF
- Put icon in SysTray – ON
- Translate to ASCII – ON
- Expire time – 120 mins
- Object interval -30 mins
- Label symbols – ON
- Only label translations – OFF
- Show label background – ON
- Relaxed locator check – ON
- Relaxed frame type check – ON
- Synth callsigns – ON
- “More” in detail window – ON
- Show splash screen – ON
- Show startup tips – OFF
- Object auto update defaults to enabled – ON
- Extra maps path – blank

APRS Server Setup

Note: This does not turn on the I-gate abilities.

- Select (or add) ahubswe.net:2023
 - To add a server, highlight any server and press [Insert]. Enter the name and press [Enter]
- APRS server log on required – ON
 - Validation number – *according to your registration*
 - Enable auto reconnect - ON
- Gate RF to Internet – all OFF
- Gate Internet to RF – all OFF
- Enable local server – OFF
- Max silence – 2 mins

MS-Agent

- Leave this alone; having it announce every station is just annoying.
- If you insist on turning it on, enable sound first, then read the help.

Meteor Mode Setup

- Leave this alone as well, for now.

Exclude/Include Lists

- Leave all sections blank.

Auto Track List

- Add any callsigns you want to track. This is useful if you want to follow someone who's on a trip, or something.

Edit Translations

- If you want, for instance, VE3FYN-1 to show up as "Warren", enter "VE3FYN" in the first box and "Warren" in the second. Note that you need the full call and SSID. Wildcards don't work.

Tooltip Help

- Leave it alone.